

# NEW UNIVERSAL REMOTE CONTROL



Multifrequency  
**All-in-one**  
Up to **3** different remotes in **1**



**technology** - **fixed**code - **rolling**code




## **FIXED CODE** DUPLICATING PROCEDURES

1. While pressing the button 1 of the “JEKO”, press 4 times the button 2.
2. Release both buttons. Now the led of the JEKO emits a quick flash every 2 sec.
3. Place the original remote control in front of the “JEKO”, at about 4-5 cm of distance (as shown in the picture below).
4. Press and retain pressed the button of the original remote control that you want to copy until the JEKO's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the “JEKO” where you want to store the. code just copied, until the led will turn off.
6. The copy has been happened with success, verify on the automation the orderly functioning of the new JEKO remote control.

### Note:


- If the LED will flash only 3 times and than will turn off, it means that the code hasn't been copied well. In this case repeat the operation from the point 1.
- The memory of the “JEKO” is completely re-writable.
- To duplicate a second button, repeat the operation from the point 1.

## ROLLING SIMPLE DUPLICATING PROCEDURES

1. While pressing the button 1 of the “JEKO”, press 4 times the button 2.
2. Release both buttons. Now the led of the JEKO emits a quick flash every 2 sec.
3. Place the original remote control in front of the “JEKO”, at about 4-5 cm of distance (as shown in the picture below).
4. Press and retain pressed the button of the original remote control that you want to copy until the JEKO's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the “JEKO” where you want to store the. code just copied, until the led will turn off.
6. The copy has been happened with success.
7. Proceed with the remote control recognition on the receiver by the  procedure (verify the models list - see 5-6-7 pages) or follow the producer's methods.

Note:

- If the LED will flash only 3 times and than will turn off, it means that the code hasn't been copied well. In this case repeat the operation from the point 1.
- The memory of the “JEKO” is completely re-writable.
- To duplicate a second button, repeat the operation from the point 1.

**To activate the remote control on the receiver for models marked with , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the JEKO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the “radio-mode” disarmed. In this cases will be necessary insert the new remotes controls with the “manual procedures”.**

## ROLLING COMPLEX DUPLICATING PROCEDURES




1. While pressing the button 1 of the "JEKO", press 4 times the button 2.
2. Release both buttons.  
Now the LED of the JEKO emits a quick flash every 2 sec.
3. Place the original remote control in front of the "JEKO", at about 4-5 cm of distance.
4. Press and retain pressed the button of the original remote control that you want to copy until the JEKO's led will turn on with a fix light and then emits a double flash every 2 sec.
5. Transmit now the seed code of the original remote control (by pressing the rear hide button or the buttons 1 and 2 simultaneously in the new models)
6. Now the LED will flash quickly, press the button of the "JEKO" where you want to store the code just copied, until the LED will turn off.
7. Now activate the  procedure to insert the new remote control on the receiver.



**ATTENTION, PLEASE: Verify that the remote control to be copied is a MASTER.**

**Pressing any button, the LED should issue a double flash rather than switch on immediately as a fixed light.**

1. While pressing the button 1 of the "JEKO", press 4 times the button 2.
2. Release both buttons.  
Now the LED of the JEKO emits a quick flash every 2 sec.
3. Predispose the FAAC/GENIUS remote control for the emission of the seed code (by pressing simultaneously the buttons 2 and 3)
4. While the FAAC/GENIUS LED is flashing, place it in front of the "JEKO", at about 4-5 cm of distance and press the button that you want to copy until the JEKO's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the "JEKO" where you want to store the code just copied, until the led will turn off.

**To activate the remote control on the receiver for models marked with , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**






















Refer to the instructions of the original model.


**NOTE The seed code of the JEKO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".**

## LISTE COMPATIBILITES VERSION

ADYX	 BRAVO, TE4433	MHOUSE	 TX4
ALLMATIC	 B.RO OVER, B.RO 2WN, TECH3	MOOVO	 MT4
APERTO	TX02-434-2, TX03-434-4	NICE	 SMILO, FLOR-S, VERY-VR, ONE, INTI
APRIMATIC	 TR, TM	NOVOFERM	NOVOTRON 502-504-512MIX43-2, MTR40-2, MCHS43-2, MHS43 (2-4), MNHS433 (2-4)
BALLAN	FM404B, 4013	O&O	T.COM, TWIN, TX
BENINCÀ	 TO.GO, T2WV, IO, CUPIDO, LOT2WCV	PRASTEL	 TC2E(4E), MT2E(4E), SLIM, BFOR, MPSTP2E
BFT	 MITTO, MITTO B, GHIBLI, KLEIO, TRC	PROEM	ER4C4ACS
CARDIN	 S449, S486	PUJOL	 VARIO, MARTE
DEA	TR MIO	RIB	LITHIO
DITEC	 GOL	SEAV	BE HAPPY
FAAC	 XT4 433 RC	SICE	 4790207
FAAC	XT 433SLH, XT 868SLH, T 433 SLH, T 868 SLH, TML 433SLH, TML 868 SLH, DL 868 SLH	SIMINOR	S433 (2T-4T), ER2C4ACS, ER4C4ACS
FADINI	 JUBI SMALL	SOMFY	 TELIS
GENIUS	 BRAVO 433	SOMMER	4014 (434), 4013 (434), 4026 (868), 4020 (868), 4022 TXO2 (434)
GENIUS	AMIGO, AMIGOLD, KILO	TAU	 250 SLIM RP, 250 T4 RP
GIBIDI	 AUO1590, AU1600, DOMINO	TELCOMA	FM 402, FM 402 E
KEY	900TXB - 42R, SUB44	VDS	 TRQ, ECO-R
KING GATES	STYLO	V2	 PHOENIX 433-868, TXC, TSC, TRC, HANDY
LABEL	SPYCO		

**To activate the remote control on the receiver for models marked with  , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the JEKO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".**